



Model # 60KW Blaze 60E

Start Up Instructions

1. Determine if the power source is 480V or 600V.
2. Verify source power matches the voltage requirements of the heater.
3. Connect Flanged Cam locks to female cam locks (color coded) Connect cam locks as follows:
 - RED L1
 - BLACK L2
 - BLUE L3
 - Ground G
4. Turn on the power supply.
5. Set selector to "Remote Stat" if using a thermostat, or "Bypass" if not.
6. Turn Heat on/off switch to the "ON" position (The blower will start, and heater elements will start to heat up)

HEAT SETTING	BTU/Hr.	CFM
60kW	205,000	4,500
40kW	136,500	4,500
20kW	68,250	4,500
FAN ONLY	0	4,500

Shut Down Procedure

1. Move heat ON/OFF control setting to the "OFF" position
2. When cooling fan shuts down you may shut off power source
3. Shut off power source
4. Disconnect all power sources
5. Store heater