



Model # HR1100

Start Up Instructions

1. Connect power to a 15 AMP 208Volt 1PH breaker
2. Connect proper fuel supply – Propane or Natural gas
3. The heater is equipped with a fuel selector valve, ensure fuel selector valve is in the proper fuel position.
4. Open fuel supply valve at the fuel source and turn shut off valve on heater to the “ON” position. Leak check all connections.
5. Thermostat must be plugged into heater before turning and set to a desired temperature before turning the heater on
6. The heater is equipped with 2 heat functions “High/Low fire” and “High/Off Fire”, turn the switch to desired heat setting
7. Turn Blower switch to the ON position.
8. The Fan will turn on (the heater must prove air before the burner will lite).
Once the heater has proven air, the heater will call for ignition and will ignite.

Shut Down Procedure

DO NOT UNPLUG THE HEATER WHILE IN OPERATION.

1. Turn off fuel supply
2. Turn switch to the ‘off’ position. The heater fan is on a 30 second time delay please allows the heater fan to continue to operate for 30 seconds.
3. Disconnect power supply and fuel supply