



Model # HR1600

Start Up Instructions

1. Connect fuel supply line to manifold inlet and turn on the gas supply at source. Check for leaks at all connections.
2. Open all valves between fuel supply and gas manifold inlet valve, and then open gas manifold inlet valve
3. Place the heat/Fan switch to "HEAT" position if running without thermostat and if running with the thermostat leaving the heat/Fan switch to 'HEAT' position plug in the thermostat into the remote stat receptacle. Then blower will start and purge the unit for a pre-set time (2-5 sec.) before the ignition sequence will begin
4. Once the pilot flame has been established, the main flame will come on and will begin to adjust as needed to maintain the discharge air temperature at the pre-set temperature.
5. Set Thermostat to desired room temperature.

Shut Down Procedure

1. Turn gas supply manual inlet valve to OFF position.
2. Place Main switch to "ON" position and Heat/Fan switch to "FAN" position as well.
3. Allow the heater to cool down for several minutes; then place the Main switch and Heat/Fan switch to "OFF" position.
4. Turn off the gas supply at the LP-Gas cylinder or gas main inlet when the heater is not in use.