



Model # IDF750 Frost Fighter

Start Up Instructions

- 1) Securely attach the fuel line to the heater. Maximum fuel supply pressure is 14" W.C. Minimum fuel supply pressure is 7" W.C. (natural gas) and 11" W.C. (propane).
- 2) Check the fuel conversion valve to ensure it is in the proper position. Refer to the label on the heater for proper positioning.
- 3) Connect the electrical power supply. Refer to the heater rating plate for the required voltage.
- 4) Turn on the fuel and electrical supplies. Set the heater selector switch to manual or thermostat and the heater should start.
- 5) If the heater does not start check for proper electrical and fuel supplies. Reset the burner control.

Shut Down Procedure

- 1) Turn the heater selector switch to off. The supply fan will continue to run to cool down the heat exchanger.
- 2) To prevent damage to the heat exchanger do not disconnect the power supply until the supply fan stops.